 
 
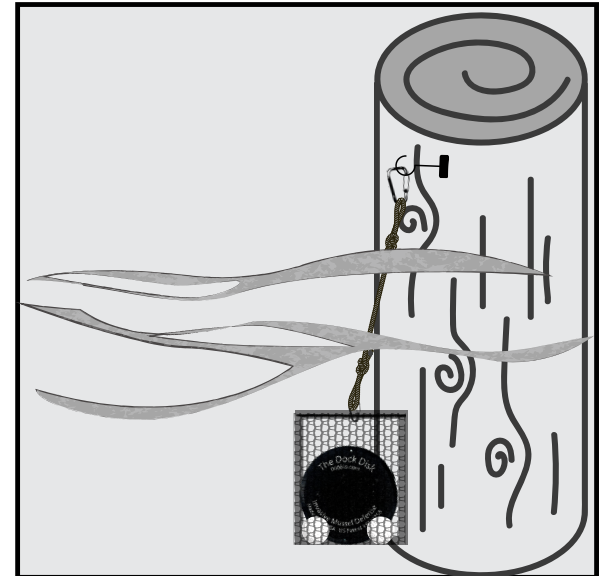 
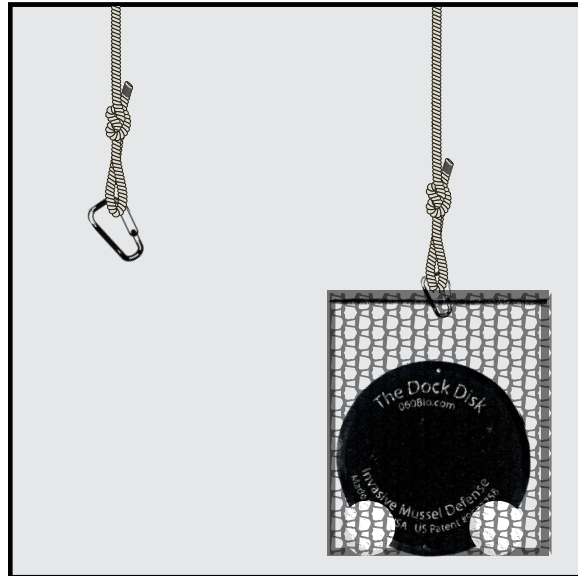 
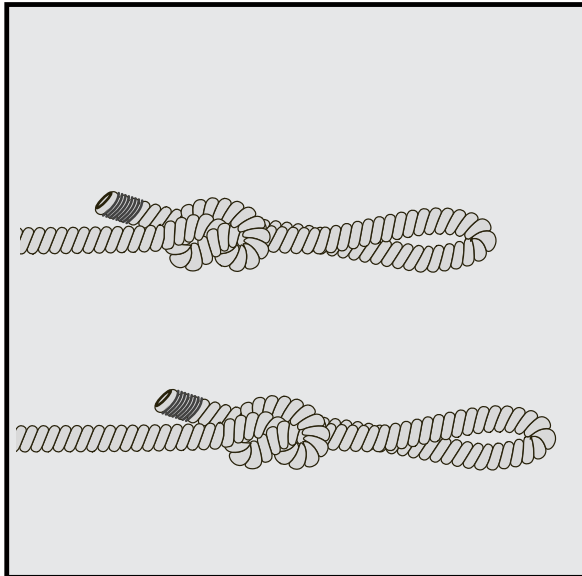 


HANGING INSTRUCTIONS

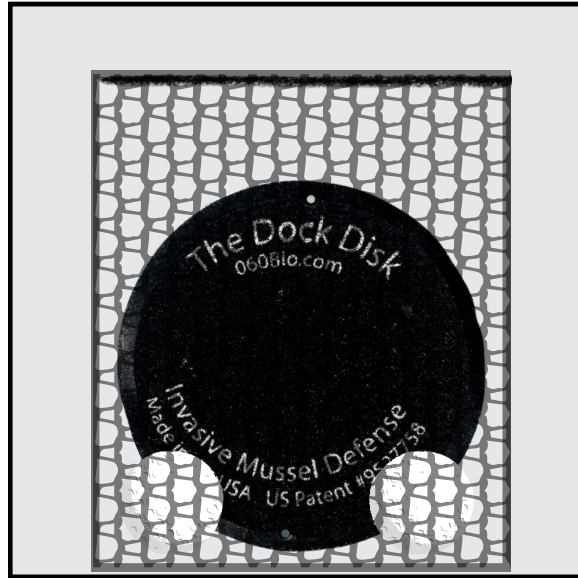

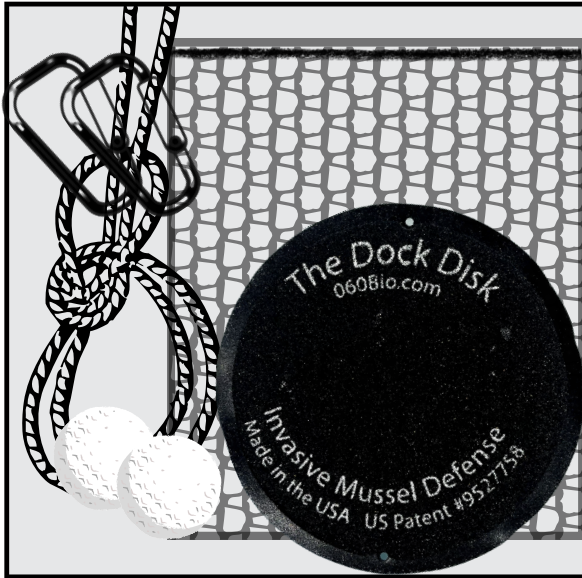

HANGING INSTRUCTIONS CONT.

- LEAVE THE DISK AND GOLF BALLS IN THE MESH BAG
- PULL THE DRAW STRINGS IN CENTER OF THE MESH BAG AND CONNECT ONE CARABINER.
- TYING OFF, DETERMINE THE DESIRED LENGTH OF CORD AND TIE A LOOP AT EACH END.
- CONNECT THE OTHER CARABINER TO ONE END AND THE CARABINER ATTACHED TO THE MESH BAG TO THE OTHER END.
- ATTACH TO THE DOCK USING AN EYE SCREW OR TIE ONTO YOUR BOAT BUMPERS OR RAILS, INSERTING THE MESH BAG AND DISK INTO THE WATER.

IF THE DOCK DISK SYSTEM IS PHYSICALLY ATTACHED TO THE BOAT, PULL IT OUT OF THE WATER BEFORE TROLLING OR MOTORING AWAY.

CAUTION: TRAVELING AT HIGH SPEEDS COULD DAMAGE THE DOCK DISK AND/OR ITS HANGING SYSTEM, RESULTING IN POSSIBLE LOSS OR INEFFECTIVENESS OF THE PRODUCT.

WHEN AT ANCHOR SIMPLY PLACE THE DISK IN THE WATER TO PROVIDE PROTECTION AGAINST ZEBRA AND QUAGGA MUSSELS.

NOTE: THIS IS A FOAM-BASED PRODUCT AND WILL TAKE SOME TIME TO SATURATE AND SINK.

KEEP THE DOCK DISK IN A COOL, DRY PLACE UNTIL READY TO USE